 


OPERATING INSTRUCTIONS

RADIO RECEIVER, 6 DISC CD COMPATIBLE WITH MP3

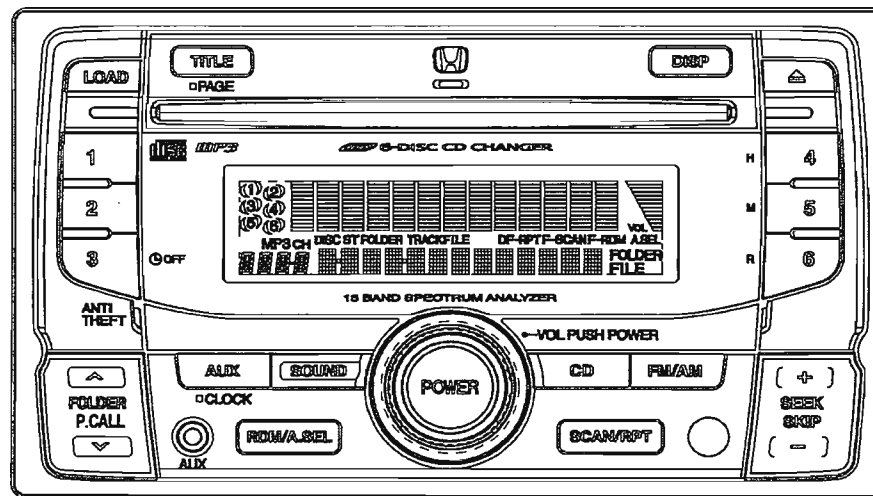

 **HONDA**

YGFMTO3074

Contents

Precautions	3
Audio Operating Instructions	6
Radio Operating Instructions	12
CD Operating Instructions	15
CD (MP3) Operating Instructions	18

Explanation of the hand marks



Turning the knob.



Press momentarily



Press and hold

 
Precautions

Please write the serial number (on the bottom of the card) in the space below.
keep this booklet as a record of your purchase to help identify the unit if it's stolen.

Serial No. : _____


This car audio for HONDA contain Anti-Theft function. When turn on a radio, a word "CODE" will be displayed. After that please input 5 digits code (Code Number) that indicated in card which attached with radio.

Remark "CODE" displayed will show. When initial using after take off car battery or take off power cord of radio only. Below picture are example of Identification Card.

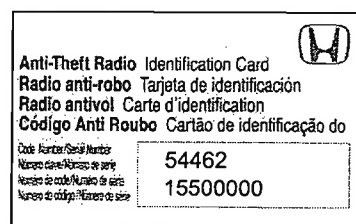

Precautions

 CD Maintenance and Warning

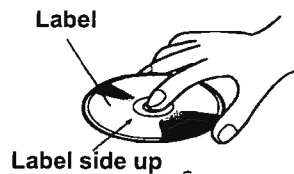

Do not touch the underside of the disc.



Do not bend.



Do not use non-circular disc.



Wipe the disc from center to outside direction.

- Dirt, dust, scratches and bending of discs will cause misoperation. Handle discs with care.
- Do not place stickers or scratch the disc.
- Do not bend discs.
- Do not use non-circular compact disc.
- Do not use mini compact disc (diameter 8 cm).
- Discs should always be kept in their cases when not in use to prevent damage.

Do not place discs in the following places:

1. In direct sunlight.
2. In dirty, dusty and damp areas;
3. Near the vehicle heaters.
4. On the seats dashboard.

Disc Cleaning

 
Use a dry soft cloth to wipe the surface. If the disc is dirty use soft cloth slightly.

WARNING !

1. Audio can't use Karaoke disc, Video CD and DVD disc.
2. In case audio have problem please send to service center only.

Precautions



CAUTION FOR USE OF A NEW DISC

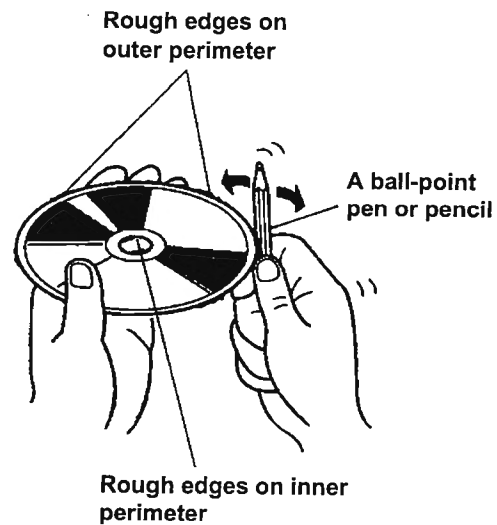

A new disc may have rough edges on its inner and outer perimeter. If a disc with rough edges is used, proper setting will not be possible and the CD player will not play the disc. Therefore, remove the rough edges in advance by using a ball-point pen or pencil as shown on left. To remove the rough edges, press the side of the pen or pencil against the inner and outer perimeter of the disc.


Audio Operating Instructions

  POWER ON/OFF , VOLUME CONTROL

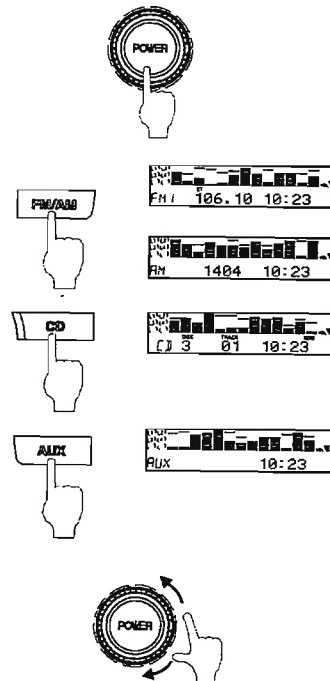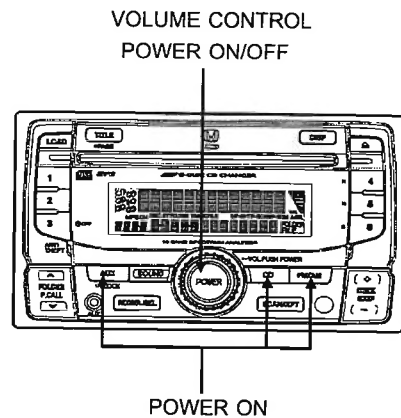

POWER ON/OFF

- Press the POWER button to ON/OFF.
- Press the FM/AM button to ON.
- Press the CD button to ON.
Note If Disc isn't inserted can't Power ON.

- Press the AUX button to ON.
Note A pin-jack should be connected to  AUX

VOLUME UP

- Turning the knob clockwise to increase the volume.

 
VOLUME DOWN

- Turning the knob counter-clockwise to decrease the volume.


Audio Operating Instructions

BAS/TRE/FAD/BAL CONTROL

ADJUST EACH MODE

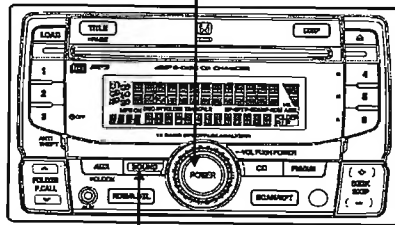

BAS/TRE/FAD/BAL

 



BAS/TRE/FAD/BAL CONTROL

- The sound adjustment mode is set. The BASS , TREBLE , FADER and BALANCE switch each time the SOUND button is pressed down slightly.
- To adjust each mode operating the VOL Knob :
Refer to the chart below.

DISPLAY	Control Operation	
	Clockwise	Counter-Clockwise
	Bass stronger	Bass weaker
	Treble stronger	Treble weaker
	Decrease rear sound.	Decrease front sound.
	Decrease left sound.	Decrease right sound.

Audio Operating Instructions

  DISPLAY CONTROL

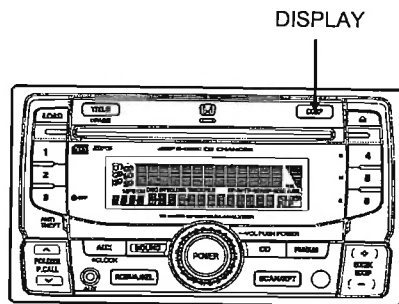

DISP
P.HOLD 10:23

P.HOLD

DISP
NORMAL 10:23

NORMAL

DISP
AURORA 10:23

AURORA

DISP
LEVEL 10:23

LEVEL

DISP
OFF 10:23

OFF



DISPLAY CONTROL

- Each time the DISP button is pressed, mode are switched in the following sequence

→ P.HOLD → NORMAL → AURORA → LEVEL
_____ OFF _____

 
 
Display Illumination level change

- Press and hold one of the DISP button until the "BEEP" sound emits display Illumination level is increase.
- Press and hold one of the DISP button until the "BEEP" sound emits again to cancel.

Note Display Illumination level change can use when open head lamp only.

Audio Operating Instructions

LOAD , EJECT COMPACT DISC

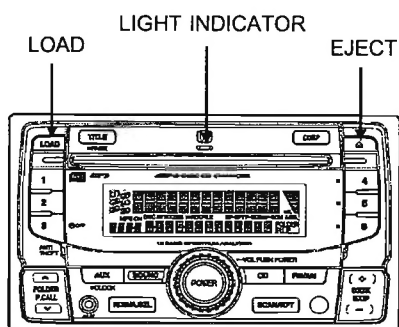

LOAD DISC

- Press the LOAD button, screen will display "BUSY" and red light indicator will show. Wait until a screen show a word "LOAD" and green light indicator show. Insert disc will play immediately.

CONTINUE LOAD DISC

- Press and hold the LOAD button until the "BEEP" sound emits, a word "LOAD" and green light indicator will show. Then insert wait until screen show "LOAD" , insert disc. Re-process again until insert total 6 disc.

Note Insert disc by disc only.

EJECT DISC

 
- Press the ▲ button to eject the disc, and the previous mode of operation will be resumed.

CONTINUE EJECT DISC

- Press and hold the ▲ button until the "BEEP" sound emits, to continue eject the disc and the previous mode of operation will be resumed.

Audio Operating Instructions

CLOCK CONTROL

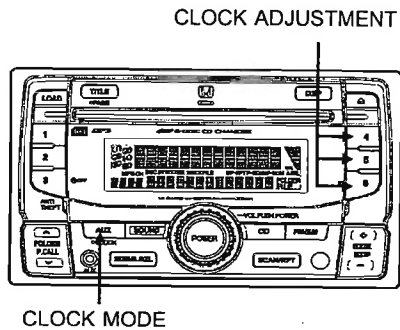


CLOCK CONTROL

- Press and hold the AUX button until the "BEEP" sound emits, will change to clock setting mode.
- Press the 4:H button each time Hour digit will be increase 1 hr.
- Press the 5:M button each time Minute digit will be increase 1 min.
- Press the 6:R button Minute digit will be clear to 00. If minute digit equal 30 min or more Hour digit will increase 1 hr. and CLOCK SETTING mode is cancel.
- Press and hold the AUX button again until the "BEEP" sound emits, to cancel clock setting mode.


Audio Operating Instructions

CLOCK CANCEL

 CLOCK CANCEL

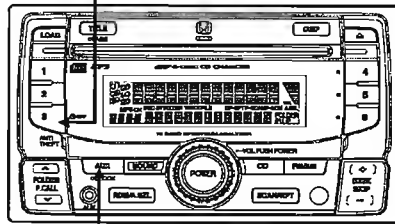

CLOCK MODE

 


CLOCK CANCEL


- Press and hold the AUX button until the "BEEP" sound emits, and press 3:OFF button. Display not show CLOCK.
- To cancel, press and hold the AUX button again until the "BEEP" sound emits, clock will be displayed.

Radio Operating Instructions

 RADIO SELECT , 1 STEP & AUTOMATIC & CONTINUOUS TUNING

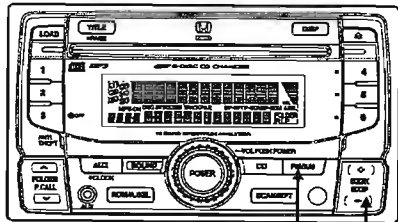

 RADIO SELECT
1 STEP UP/DOWN
AUTOMATIC TUNING
CONTINUOUS TUNING



RADIO SELECT

- Press the FM/AM button to select Radio band in the following order.

→ FM1 → FM2 → AM

1 STEP UP/DOWN

- Press the SEEK SKIP (+) button increase the 1 step of received frequency.
- Press the SEEK SKIP (-) button decrease the 1 step of received frequency.

Note AM 9kHz/step, FM 0.05 MHz/step

AUTOMATIC TUNING

 
 
- Press and hold the SEEK SKIP (+) or SEEK SKIP (-) button until the "BEEP" sound emits seek tuning will operate and stop automatically on the next strong station.

CONTINUOUS TUNING

- Press and hold the SEEK SKIP (+) seek stations will up continually.
- Press and hold the SEEK SKIP (-) seek stations will down continually.

Radio Operating Instructions

AUTOMATIC SELECT, PRESET , CALLING CONTROL

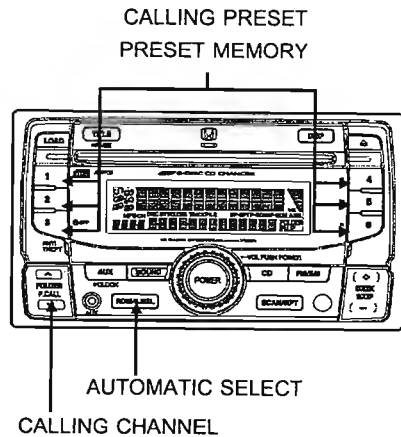

AUTOMATIC SELECT

- Press the RDM/A.SEL button, the 18 strongest available stations will be set in memory on preset buttons 1 through 6 (AM 6 stations, FM 12 stations).
- Press the RDM/A.SEL button again to cancel.

PRESET MEMORY

 
- Press and hold one of the button 1 through 6 until the "BEEP" sound emits. The preset frequency will be set in memory on selected button.

CALLING PRESET

- Press the 1 through 6 to call the frequency stored in the preset channel.
- Press the FOLDER P.CALL (▲) or (▼) button to call the next or previous preset channel.

Radio Operating Instructions

FREQUENCY SCAN

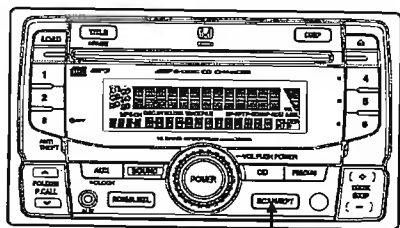

SCAN

 


SCAN

- Press the SCAN/RPT button to start the frequency scan. Screen will display "SCAN". The frequency will stop at the next strong signal for 5 Sec before scan continue.
- Press the SCAN/RPT button again to cancel.

CD Operating Instructions

CD PLAY , DISC & TRACK SELECT



CD PLAY

- While in other modes, Press the CD button to change into the CD mode and playback starts automatically.

DISC SELECT

- Press the 1 through 6 button for direct disc selection.

 
Note If no disc in a selected magazine, Insert disc mode will be resumed.

TRACK SELECT

- Press the SEEK SKIP (+) button to go to the next track.
- Press the SEEK SKIP (-) button to play from the beginning of the current track, press twice to play the previous track.

CD Operating Instructions

FAST FORWARD & REWIND , RANDOM PLAY

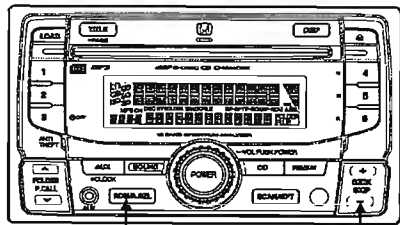

FAST FORWARD/REWIND
RANDOM PLAY



FAST FORWARD/REWIND

 
- Press and hold the SEEK SKIP (+) button until the "BEEP" sound is emitted. Speed fast forward will be operated. When you leave a hand, the disc will be played.
- Press and hold the SEEK SKIP (-) button until the "BEEP" sound is emitted. Speed fast rewind will be operated. When you leave a hand, the disc will be played.

RANDOM PLAY

- Press the RDM/A.SEL button to random play, the screen will display "RDM".
- Press the RDM/A.SEL button again to cancel.

CD Operating Instructions

REPEAT PLAY , CD SCAN

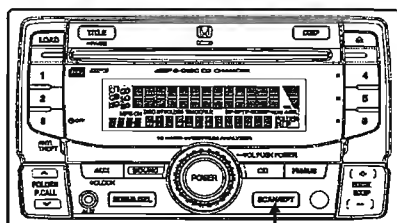


REPEAT PLAY
SCAN



REPEAT PLAY

 - Each time the SCAN/RPT button is pressed, modes are switched in the following sequence




SCAN


- Press and hold the SCAN/RPT button until the "BEEP" sound is emitted. Screen will display "SCAN" and play next track for 10 seconds then moves to next track. This operation is performed for all tracks in the disc.
- Press the SCAN/RPT button again to cancel.

CD (MP3) Operating Instructions

 TRACK SELECT , FAST FORWARD/REWIND

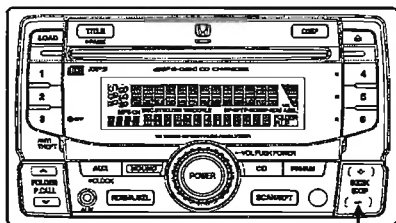

TRACK SELECT
FAST FORWARD/REWIND

 

TRACK SELECT

 
- Press the SEEK SKIP (+) button to go to the next track.
- Press the SEEK SKIP (-) button to play from the beginning of the current track, press twice to play the previous track.

FAST FORWARD/REWIND

- Press and hold the SEEK SKIP (+) button until the "BEEP" sound is emitted, speedy fast forward will be operated. When you leave a hand, the disc will be played.
- Press and hold the SEEK SKIP (-) button until the "BEEP" sound is emitted, speedy fast rewind will be operated. When you leave a hand, the disc will be played.


CD (MP3) Operating Instructions

FOLDER SELECT , RANDOM PLAY

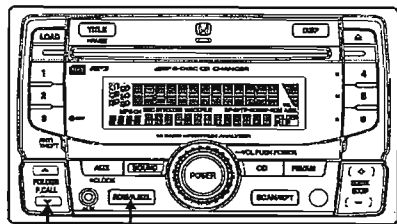

FOLDER SELECT

 RANDOM PLAY




FOLDER SELECT

- Press the FOLDER P.CALL(▲) button to go to the next Folder.
- Press the FOLDER P.CALL(▼) button to play from the beginning of the current Folder, press twice to play the previous Folder.


RANDOM PLAY

 - Each time the RDM/A.SEL button is pressed, modes are switched in the following sequence



CD (MP3) Operating Instructions

 REPEAT PLAY , FOLDER SCAN

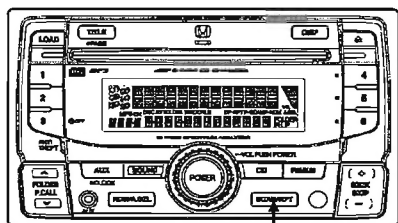

REPEAT PLAY
SCAN

SCAN/RPT

 


SCAN/RPT



REPEAT PLAY

- Each time the SCAN/RPT button is pressed, modes are switched in the following sequence




FOLDER SCAN

- Press and hold the SCAN/RPT button until the "BEEP" sound is emitted. Screen will display "F-SCAN" and the unit plays the beginning of first file in the folder for 10 seconds then moves to the next folder. This operation is performed for all folders in the disc.
- Press the SCAN/RPT button again to cancel.

CD (MP3) Operating Instructions


FOLDER NAME and FILE NAME INDICATION

 FILE NAME INDICATION
FOLDER NAME

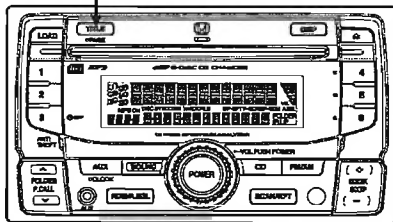

FOLDER NAME & FILE NAME INDICATION

 - Each time the TITLE button is pressed, modes are switched in the following sequence



- Press the TITLE button screen will display "Folder " and the 13 characters of folder name display for 5 seconds.
- Press and hold the TITLE button until the "BEEP" sound is emitted to display next 13 characters (For Folder name more than 13 characters).
- Press the TITLE button screen will display "File" and the 13 characters of folder name display for 5 seconds.
- Press and hold the TITLE button until the "BEEP" sound is emitted to display next 13 characters (For File name more than 13 characters).